 


iPod Touch Wireless Troubleshooting

The iPod Touch will automatically scan for available wireless networks and allow you to connect automatically. However, should you experience disconnection or receive errors on opening new pages, you may need to reset the connection

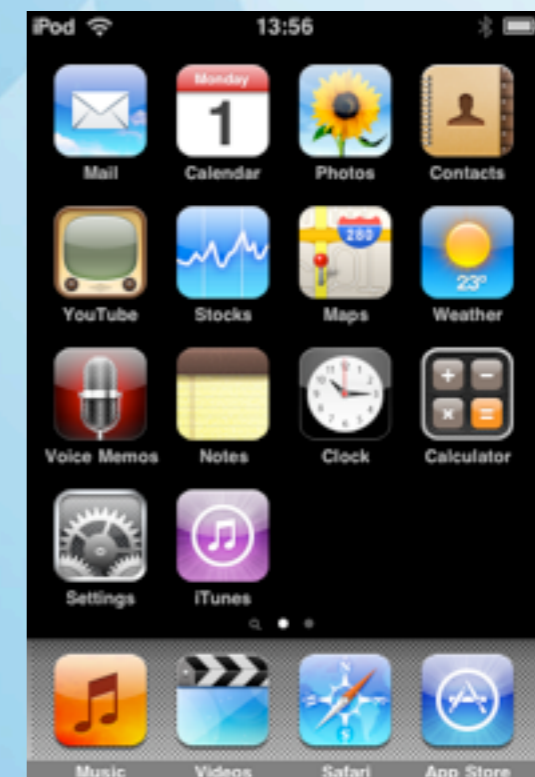

Wireless networking can be accessed through the [Settings](#) icon on the Home screen




Choose **Wi-Fi** at the top of the screen, and make sure Wi-Fi is switched **ON**

Choose the **UCW_Wireless** network to connect to

The iPod Touch will then automatically take you to the wireless login page

Choose **Wireless** from the drop down box and enter your network username and password. Read and agree to the terms and conditions and select **Log In** to finish connection set up

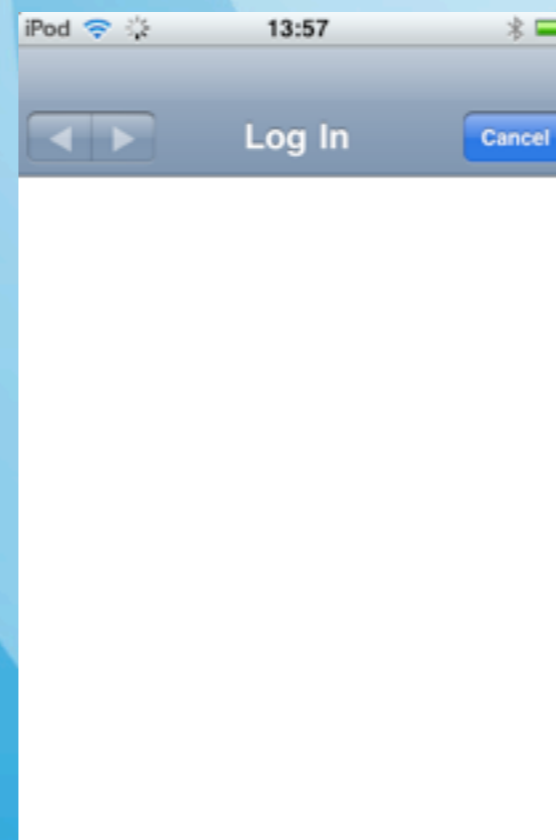

For further help and information in using the iPod Touch at the University of Worcester, please contact eos@worc.ac.uk

Official Apple iPod Touch documentation can be found here:
[Apple iPod Touch Manual](#)