 



Océ | Print Instruction




Océ VarioPrint 2045-70 / Océ 31x5E

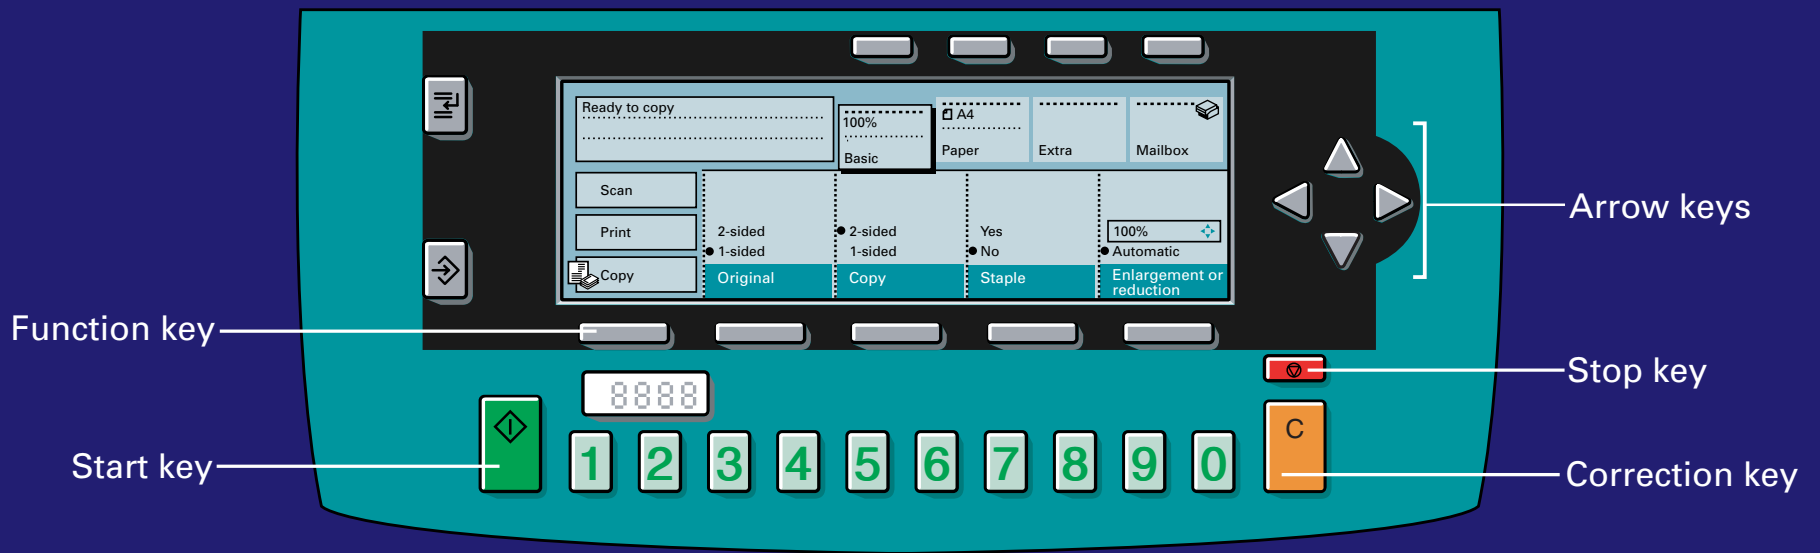

 
1. Select the **Print** mode

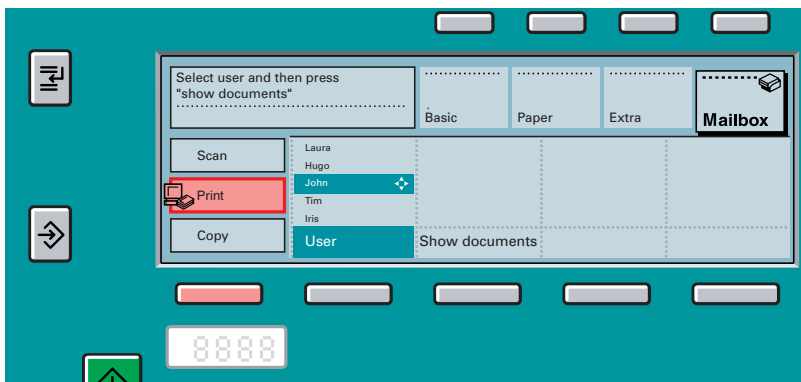


2. Select your **User** name with the Arrow keys

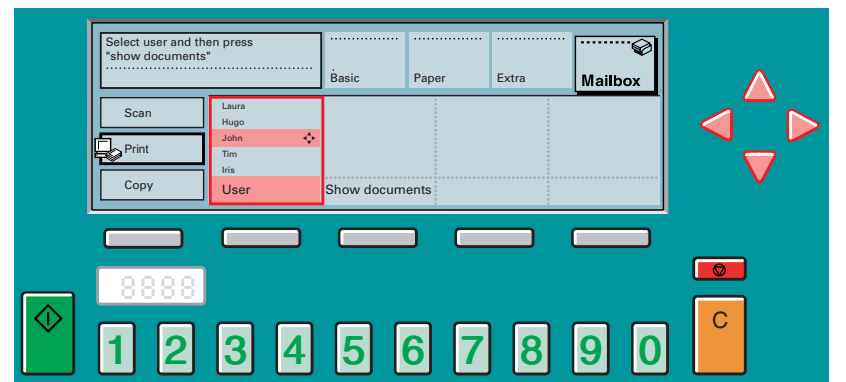

 
3. Press the Function key under **Show Documents**

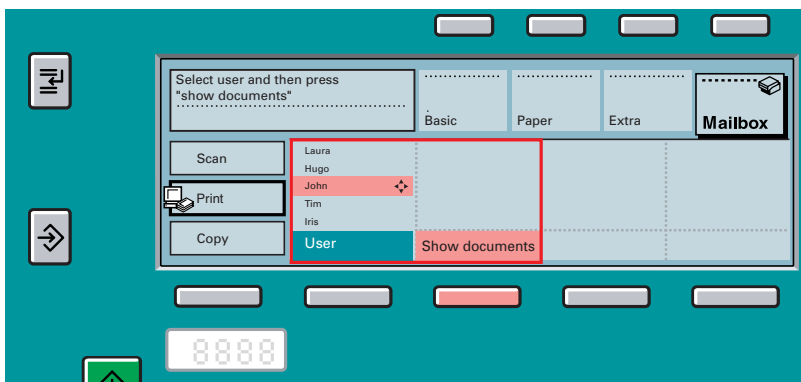

 4. Select your document(s) with the Arrow keys

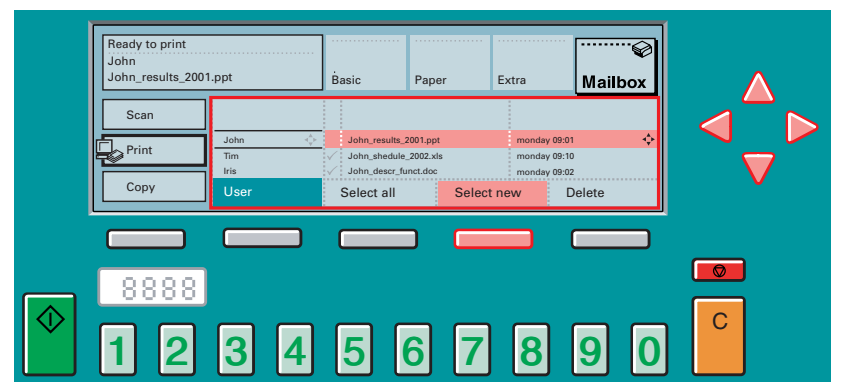

 5. Select the number of prints

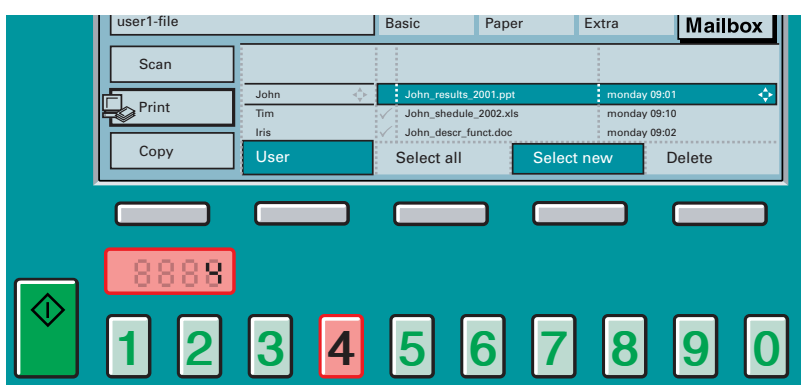

6. Press the green Start key

